


## HOW TO UPDATE DATABASE AND PICTURES ON TECHLA 3.0

To proceed with this operation, you need a USB flash drive of 16 GB maximum.

Unzip the folder “**update.zip**”: double-click on it, a window with the file **database.vrp** and the folder **pictures** inside will open; select both files and take them out of the window onto the desktop.

The following files will appear:

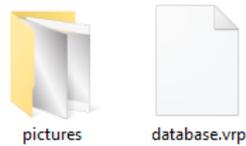

Copy the folder “**pictures**” and the file “**database.vrp**” in the main directory of the USB flash drive and, when everything is ready, switch the machine ON.


Switch the machine ON and wait for the home screen:



Insert the USB flash drive, with the suitable files, into the slot on the front of the machine, as shown in the following photo:




Press  and this screen will appear:

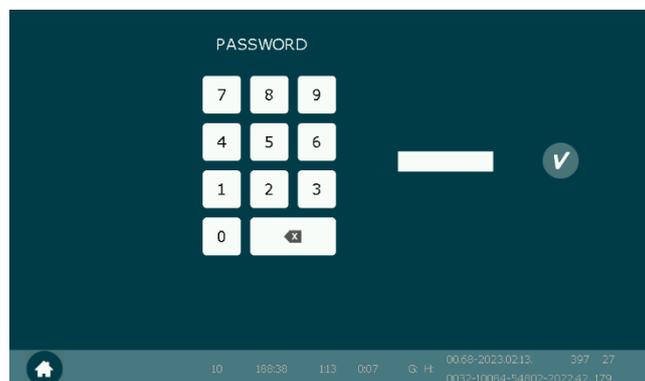


Insert the password **09876** and press  to proceed.

This screen will appear:

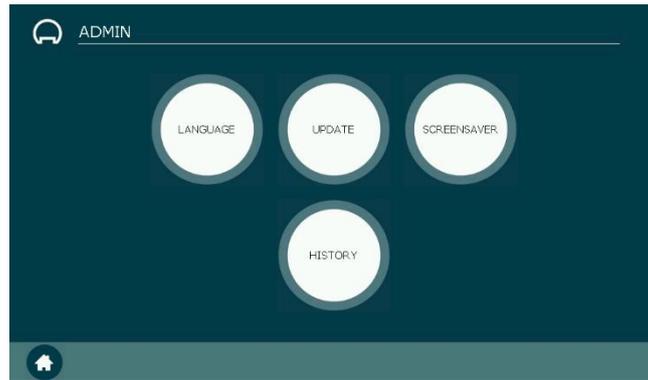

Press "**UPDATE**" button and this list will appear:

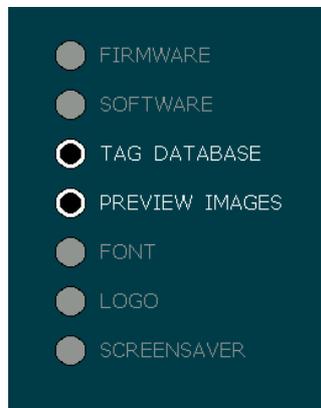

Press  to proceed and these screens will appear:



At the end, the home screen will appear again.

Remove the USB flash drive.

**This process is now finished.**

**Your Techla machine is now ready to be used!**